LASER®

INSTRUCTIONS

Wiper Arm Removal Tool

Suitable for spline taper and taper spigots

- 1 Ensure the threaded bar is well lubricated before use.
- 2 Position tool around the wiper spindle.
- 3 Turn the knob in a clockwise direction to loosen the wiper arm.

NOTE: The knob should not need forcing, and if it does the joint may need lubricating or gently heating or taping to remove the wiper from the spindle.

