


Part No. 4577

LASER[®]

Instructions


Timing Tool Set

for Rover V6, MG, Land Rover

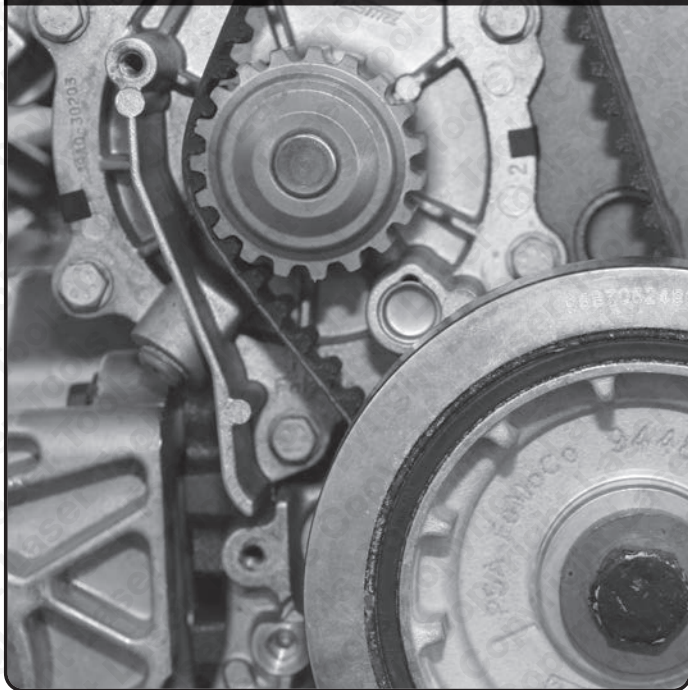

www.lasertools.co.uk

Components

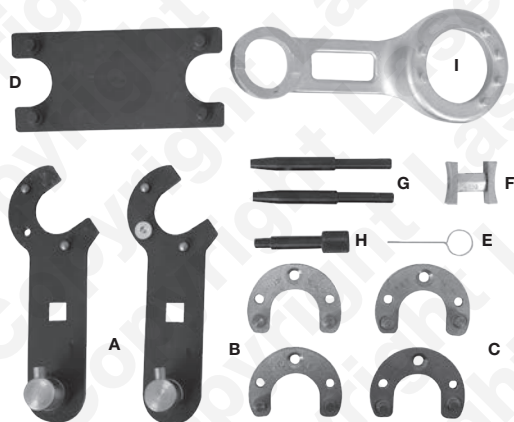

Ref.	Code	OEM Ref.	Description
A	C364	LRT12-196	18G 1747 Camshaft Locking Tools x2
B	C365	LRT12-187	12-187 Camshaft Locking Tools 2.0 x2 - Gold coloured
C	C366	18G 1747-2	Camshaft Locking Tools 2.5 x2 - Silver coloured
D	C368	LRT12-175	12-175 Rear Camshaft Sprocket Tool
E	C284		Camshaft Tensioner Pin
F	C370	LRT12-195	Rear Camshaft Sprocket Spreader
G	C371	LRT12-198	18G 1746 A Rear Sprocket Guide Pins x2
H	C367	LRT12-232	18G 1747-5 Crankshaft Locking Pin
I	C369	LRT12-175	18G 1747-1 Camshaft Pulley Locking Tool

This tool set does NOT have the correct Camshaft Locking Tool for the MG ZT 190 engine.

www.lasertools.co.uk

Applications

Make, Model, Year				Engine Codes
Land Rover	Freelander		2000 - 2006	2,0 KV6
MG	ZR	150	2004 - 2005	2,5 KV6
	ZS	180	2001 - 2005	
	ZT	160, 180	2001 - 2005	
Rover	45		1999 - 2005	
	75		1999 - 2005	
	825		1996 - 1999	

Always refer to the website for most up to date applications:

www.lasertools.co.uk/product/4577

Instructions

The following instructions are for guidance only. Please refer to OEM derived data such as the vehicle manufacturers' own data or Autodata.

The use of this engine timing tool kit is purely down to the user's discretion and The Tool Connection Ltd. cannot be held responsible for any damage caused whatsoever.



Warning – Incorrect or out of phase engine timing can result in damage to the valves. It is always recommended to turn the engine slowly, by hand, and to re-check the camshaft and crankshaft timing positions.

www.lasertools.co.uk

Instructions

General Instruction:

- Disconnect battery earth lead.
- Remove spark plugs to ease turning engine.
- Turn engine in normal direction of rotation.
- Always observe the correct tightening torques.
- If fitted: Mark the Crankshaft Sensor position before removal.
- Do not use the Camshaft and/or Crankshaft Sprockets as a means to turn the engine.
- Do not turn either Camshaft or Crankshaft whilst the chain is not fitted.

Front Timing Belt

To service the front timing belt it is necessary to safely raise the front of the vehicle and support the engine to enable the removal of the right hand front wheel, splash guard and the rear cover of the left hand cylinder bank.

The camshaft position can now be observed.

Rover 825 Models

Ensure the Crankshaft position is 60° BTDC (Before Top Dead Centre) and the hubs on the rear of left hand bank of camshaft sprockets are facing together and permit the tool (F) to be fitted.

Rover 45/75 & Land Rover Freelander

The alignment of the white marking on the crankshaft pulley with the 'SAFE' arrow timing mark on the mounting plate is required and is checked using tool (D) which is designed to fit the stepped positioning.

On these models it is also necessary to remove the Crankshaft Pulley.

Prior to installing the front timing belt it is necessary to slowly compress the tensioner pushrod into the tensioner body by using a vice until the holes align and then retain using Tensioner Pin (E).

Rover 45/75 & Land Rover Freelander

1. On these models remove the rubber blanking plug, and turn the tensioner anti-clockwise to release the tension, taking care not to loosen the tensioner pulley fastener.
2. Do not rotate the crankshaft whilst the Timing Belt is removed.
3. The two Camshaft Locking Tools (A) are assembled by using the correct and appropriate Adaptor (B) or (C) fastened to main tool and retained by the two pins and cap screw provided.

Instructions

4. One set (Gold) are for 2.0 litre engine and the other set (Silver) are for 2.5 litre Also marked with the appropriate engine size.
5. The Spanner end of the tool with pegs is fitted into the front sprocket hub, and then the other end of the tool which is a spindle is inserted into the end of the exhaust camshaft with the pin locating in the slot of the camshaft.
6. Once the pegs have been located any difficulty in aligning the spindle can be assisted by using a ½"D bar in the ½" sq. hole.
7. Warning! It is possible to damage the camshafts if these tools have not been installed prior to releasing/tightening the sprocket bolts.
8. Once the sprocket bolts have been removed, the tools can be removed.
9. Remove the front sprockets complete with hub assemblies to enable cleaning prior to replacing onto the camshafts.
10. Using new sprocket bolts, lightly tighten until the sprockets turn freely but do not tilt.
11. Refit the Camshaft Locking Tools after installing the new timing belts in a temporary position.
12. Turn the sprockets fully clockwise and commence positioning the new belt in an anti-clockwise direction, starting from the crankshaft gear pulley.
13. When fitting the timing belt over the front camshaft sprockets turn each sprocket only the minimum amount required to engage the belt teeth.,
14. Reposition the Tensioner to touch the belt, only remove the Tension Pin to release the plunger after installing the unit.

Rover 825 models

Remove the Crankshaft Locking Pin (H) and re-assemble the engine components.

Rear Timing Belt

1. The rear camshaft belt replacement procedure applies to both the right and left hand belts, but should only be carried out on one belt at a time.
2. The removal of two camshaft sprockets complete with belt is conducted as an assembly whilst using a Setting Tool to maintain the Sprocket position.

Instructions - Checking The Timing

3. The new belt is fitted over the sprockets and re assembled to the camshaft ends using the Guide Pins (G).
4. There is a choice of Rear Camshaft Sprocket Tool, see illustration:-

**Rover 45 | 75 and Land Rover
Freelander – Tool D**
Rover 825 models – Tool F

5. The Rear Camshaft Sprocket Spreader (I) is used to increase the distance between the two pulleys to assist in the easy assembly of either tool (D) or (F).
6. The tool is adjustable by either turning the centre nut or if tight the hexagon end in the centre screw can be turned with a 4mm Hex key.
7. Rear Camshaft Sprocket Guide Pins (G) are assembled into the ends of each camshaft to assist in installation of the sprocket assemblies. These are then removed to permit the replacement of new sprocket bolts.
8. The exhaust camshaft alignment is made easier by fitting the Spindle only of tool A and using it to gently turn and align the drive slot in the camshaft to match the rear sprockets during installation.
9. The sprocket setting tools should now be removed.

Safety Warnings - please read

Safety Precautions

Ensure that Health and Safety, local authority and general workshop practice regulations are adhered to when using tools.

DO NOT use tools if there is any sign of damage

Maintain tools in good and clean condition for best and safest performance.

Ensure that a vehicle which has been jacked up is adequately supported with axle stands.

Wear approved eye protection.

Account for all tools, locking bolts, pins and parts being used and do not leave them in or near the engine.

WARNING!

Incorrect or out of phase camshaft timing can result in contact between the valve head and the piston crown causing damage to the engine.

IMPORTANT:

These instructions are provided as a guide only.

Always refer to the vehicle manufacturer's workshop manual or refer to the appropriate Auto Data chapter.

Timing Belt and Chain books are available through The Tool Connection



Safety First. Be Protected.

Our products are designed to be used correctly and with care for the purpose for which they are intended. No liability is accepted by the Tool Connection for incorrect use of any of our products, and the Tool Connection cannot be held responsible for any damage to personnel, property or equipment when using the tools. Incorrect use will also invalidate the warranty.

If applicable, the applications database and any instructional information provided has been designed to offer general guidance for a particular tool's use and while all attention is given to the accuracy of the data no project should be attempted without referring first to the manufacturer's technical documentation (workshop or instruction manual) or the use of a recognised authority such as Autodata.

It is our policy to continually improve our products and thus we reserve the right to alter specifications and components without prior notice. It is the responsibility of the user to ensure the suitability of the tools and information prior to their use.



4577_INSTRUCTIONS_V4



www.lasertools.co.uk



Distributed by The Tool Connection Ltd
Kineton Road, Southam, Warwickshire CV47 0DR
T +44 (0) 1926 815000 F +44 (0) 1926 815888
info@toolconnection.co.uk www.toolconnection.co.uk

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: **+44 (0) 1926 818186**. Normal wear and tear are excluded as are consumable items and abuse.

www.lasertools.co.uk